


CRASHBAR
HONDA VT 1100 C2/C3

ASSEMBLY DETAILS

- A=BOLT M8x16 (4x)
B=COLLAR M8 (4x)
C=LONG NUT M8 (4x)
D=SPACER ϕ 20 L.10 (1x)
(only use for C2)

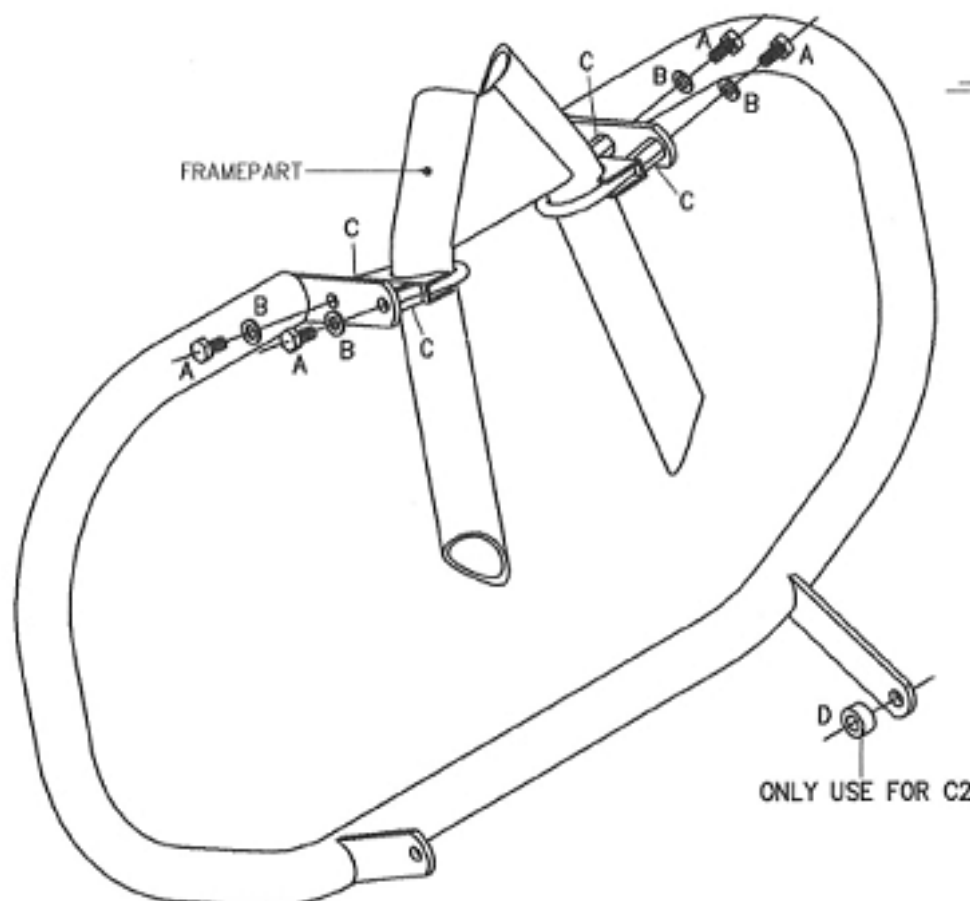


No part of this drawing may be copied or reproduced in any form or by any means without prior written consent of EMP motorparts.

CRASHBAR
HONDA VT 1100 C2/C3

ASSEMBLY DETAILS

- A=BOLT M8x16 (4x)
B=COLLAR M8 (4x)
C=LONG NUT M8 (4x)
D=SPACER ϕ 20 L.10 (1x)
(only use for C2)

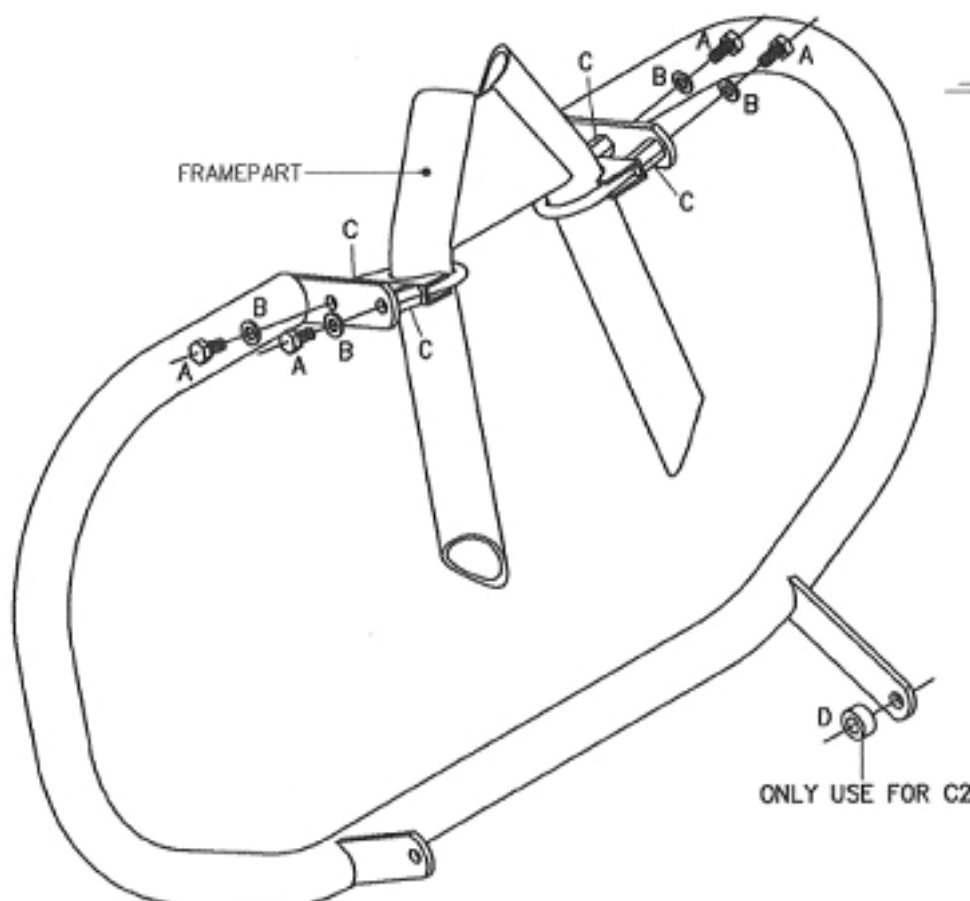

No part of this drawing may be copied or reproduced in any form or by any means without prior written consent of EMP motorparts.